

MILLENIUM PROTECT®

THE VISITORS' OVERSHOES



NF EN 12568
patented model

Elastic strap

Made in France

Protective tongue



Steel
toecap

Colour-coded by size



Composition

- TPU (Thermoplastic Polyurethan)
- Removable & interchangeable strap
- Protective tongue
- 200J steel toecap

Packaging

- ▶ 1 **KIT (MLPPUK)** includes:
 - Size S (35-39) 1 pair
 - Size M (40-44) 2 pairs
 - Size L (45-48) 2 pairs
 - ▶ 1 **LOT (MLPPUL)** includes 5 pairs of the same size: S, M or L
- 1 size above the regular shoe-size is required according to the shape of the shoe. Packaged in separate bag

Focus

- ▶ **EFFECTIVE** against impacts & compression risks
- ▶ **COMFORTABLE** thanks to its adaptable strap. Flexible material for an optimal fitting to any city shoe
- ▶ **ECONOMICAL**: re-usable by different visitors. Its removable and interchangeable strap increases the accessory's longevity
- ▶ **HYGIENICAL**: washable and purified material. No direct contact with the foot
- ▶ **SIMPLE**: right & left foot markings. 3 sizes covering shoes sizes from 35 to 48

Compliance with standards

This product has been manufactured with utmost care to meet your requirements. This product is the subject of a certification by expert. The CE marking on this item means that it complies with the essential requirements stipulated by the European Directive 89/686/CEE related to the Personal Protective Equipments (PPE): safety, comfort, strength.

The toe protection meets the requirements of the standard NF EN 12568.

In addition, this item has been conceived to meet some requirements of the standard EN ISO 20345.

A toes protection against impacts equivalent to 200J & compression risks load of 15 kN, a tensile resistance of the upper, an abrasion resistance of the outsole, some ergonomic characteristics, a flexing resistance of the upper, a resistance to fuel oil of the outsole.

Tests have been carried out according to NF EN ISO 20344 & EN 12568. This product has been subjected to a CE type examination by a notify body: CTC (N°0075) LYON - FRANCE


Conditions of use

MANUAL CLEANING: for a better upkeep, we recommend to:

- Rinse or wash with warm soapy water (<30°)
- Clean & let it dry inside/outside if necessary

CONDITIONS OF USE: to slip on over a classic shoe for normal use (flat ground)

LIMITS OF USE: only risks for which this item has been designed. Those guarantees are valid for products in goods conditions. Use in the climb of stairs and scales or stepladder is forbidden. Our responsibility could be engaged for any other use off the current instructions. For storage conditions, please, use the original packaging. The deadline of obsolescence is 10 years from the marking date indicated on the product.

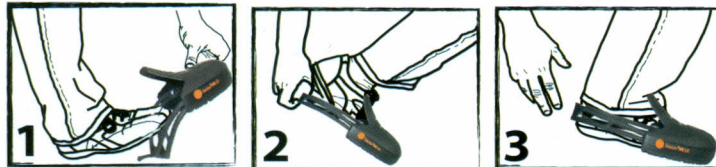

www.gastonmille.com
welcome@gastonmille.fr

Gaston MILLE®